

#### How to set the clock:

The clock's hands will automatically rotate when the battery is installed to indicate the clock is functioning. Within 5 minutes of inserting a fresh battery, a beep will be heard indicating the alarm is functioning. Set the hands to the correct time with the Time Set button once the hands have finished rotating. Push the Time Set button in and release to move the hands in small increments or hold the button in to advance the hands continuously. Be sure the front panel alarm button is in the OFF position when adjusting the time.

#### How to set the alarm:

1. Rotate the alarm thumbwheel **counterclockwise** and set the red alarm hand to the approximate time you wish to wake to. **DO NOT TURN THE ALARM THUMBWHEEL CLOCKWISE OR YOU MAY DAMAGE THE MECHANISM.**
2. Press the Alarm button ON and the green alarm LED will light. The alarm tone will activate when the clock time roughly coincides with the setting of the alarm hand.
3. To turn the Alarm OFF, press the Alarm button again and the LED will extinguish.

The Model Three Dual Alarm speaker can be set to wake to the alarm tone only.

**Important Note:** Due to the nature of the alarm wheel's analog mechanism, there can be up to a five-minute deviation from when the alarm activates. For example, if the alarm is set for 10, it is possible it could activate at 9:55 or 10:05. We recommend you set the alarm early the first time you use it to accommodate for this. As you use your Model Three Dual Alarm Speaker you will get a better idea of where you need to set the alarm to wake-up at the desired time.

#### Placement:

Placing your Model Three Dual Alarm Speaker inside a bookshelf or against a wall will inflate the bass as well as confine the speaker's output. For best sound reproduction, allow the sound from the speaker to reflect off of a ceiling without restriction. Do not place objects over the speaker grille. Do not obstruct the rear bass port. The Model Three Dual Alarm Speaker is not magnetically shielded and should be kept at least 5" away from a computer monitor or television set.

#### Cleaning:

Never use harsh cleansers or solvents or abrasive pads. The face may be cleaned with a slightly damp, soft cloth. Take care not to rub too hard. For the wood cabinet, liquid polish usually yields better results than spray-on waxes. Painting or staining the cabinet is not recommended and will void your warranty. Do not use glass cleaner or other chemicals to clean the clock's window. **Since the cabinet is natural wood, it is not always possible to achieve an exact color/grain match between the speaker and The Model Three or other Tivoli Audio products. You may also notice the wood darken over time.**

#### Warranty:

Tivoli Audio manufactures its products to very high standards and we are confident our products will perform well. Accordingly, we warranty this product against manufacturing defects in material and workmanship to the original owner, for a period of one year from the original date of purchase.

This warranty does not extend to damage caused by improper use/installation, faulty ancillary equipment, modifications, unauthorized repair, shipping damage or loss, abuse, accidents, use on improper voltage/current, lightning or other acts of God, normal wear and tear, commercial use, or purchases from unauthorized dealers. Proof of purchase as evidence the unit was purchased from an authorized dealer within the warranty period may be required for warranty service. Should service be necessary, DO NOT return the product without first contacting your dealer or Tivoli Audio. This warranty is non-transferable.

Please resist the temptation to take apart your speaker. There are no user serviceable parts, and any attempt at modifying or repairing your unit will void the warranty.

Tivoli Audio will not pay for loss of time, inconvenience, loss of use of your product, or damaged caused by this product.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties or the exclusion of consequential damages, therefore, these restrictions may not apply to you.

If you purchased an extended warranty from your dealer and service is required after the manufacturer's warranty has expired, you should contact your dealer to obtain service.

Please complete and return the enclosed card within 30 days of purchase to register your product for warranty coverage, or you may register on-line at: [www.tivoliaudio.com](http://www.tivoliaudio.com)

#### Specifications:

<b>Model:</b>	<b>Model Three Dual Alarm Speaker™</b>
Type:	Quartz analog clock with speaker
Driver:	1 - 3" full-range driver
Power Supply:	MDA-PS, 12VDC, 10mA, 120V-60Hz (UL); 230V-50Hz (CE)
Clock Battery:	*AA* 1.5V alkaline
Dimensions:	8 3/8" W x 4 1/2" x 5 1/4" D
Weight:	3.75 lbs

Specifications subject to change without notice.

Tivoli Audio reserves the right to make product changes without notice.


Tivoli Audio, the Tivoli Audio logo, and The Model Three Dual Alarm Speaker are trademarks of Tivoli Audio, LLC.

**For more information about other exciting audio products by Tivoli Audio, please visit our web sites or contact us directly:**

Tivoli Audio  
One Broadway, Suite 600  
Cambridge, Massachusetts 02142  
Tel: 877-297-9479  
[www.tivoliaudio.com](http://www.tivoliaudio.com)


## OWNER'S MANUAL

# Model Three Dual Alarm Speaker™

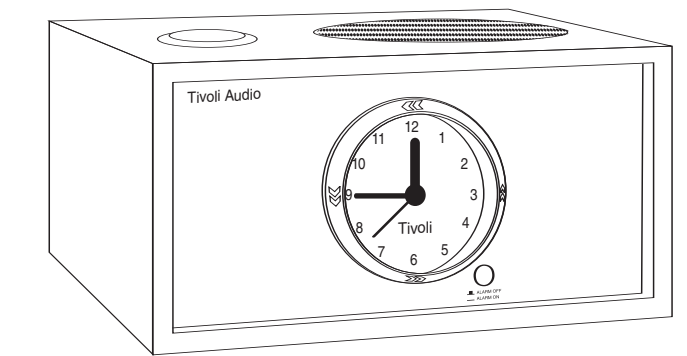

Tivoli Audio®

Tivoli Audio®

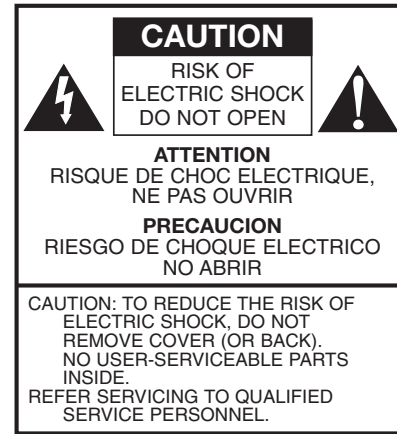

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## IMPORTANT SAFETY INSTRUCTIONS

### READ INSTRUCTIONS

All the safety and operating instructions should be read before operating this product.

### RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

### HEED WARNINGS

All warnings on the product and in the operating instructions should be adhered to.

### FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

### CLEANING

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

### ATTACHMENTS

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

### WATER AND MOISTURE

Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.

### ACCESSORIES

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious damage to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

### VENTILATION

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

### POWER SOURCES

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

### POWER CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked-on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

### LIGHTNING

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

### OVERLOADING

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

### OBJECT AND LIQUID ENTRY

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts which could result in fire or electric shock. Never spill liquid of any kind on the product.

### SERVICING

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

### DAMAGE REQUIRING SERVICE

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance – this indicates a need for service.

### REPLACEMENT PARTS

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

### SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

### HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

### NOTIFICATION

This product has been tested and found to comply with the limits for Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennas.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

## MODEL THREE DUAL ALARM SPEAKER INSTRUCTIONS

### Forward:

Thank you for purchasing The Model Three Dual Alarm Speaker. We believe the Model Three to be the best sounding, easiest to use AM/FM clock radio ever made. And with the additional Dual Alarm Speaker connected, you will enjoy stereo sound and have a second alarm option.

In order to take full advantage of what your Model Three Dual Alarm Speaker is capable of, please take a moment to fully read this owner's manual. If you have any questions, do not hesitate to contact your dealer or Tivoli Audio directly. It is a good idea to save the carton and original packing should you ever need to ship your speaker, as shipping damage is not covered by the factory warranty.

On behalf of all of us, thank you for choosing Tivoli Audio.

### About Tivoli Audio:

Model Three Dual Alarm Speaker designer Tom DeVesto started Tivoli Audio with the goal of bringing simple to use, high-quality audio products to the consumer at reasonable prices. His long professional association with Model Three co-designer Henry Kloss includes co-founding Cambridge SoundWorks\*, where as the CEO and head of research and development, Tom was responsible for many of the best-selling home entertainment and multi-media products on the market today. He also held senior management positions in product development for both Advent and Kloss Video.

**NOTE: After connecting the Dual Alarm Speaker, set the Model Three's rear Mono/Stereo switch to Stereo and set the Model Three's rear Balance control to the center detent position.**

\*Cambridge SoundWorks is a registered trademark of Creative Technology, Ltd.

### Packed with your Tivoli Audio Model Three Dual Alarm Speaker you should find:

- 1 external power supply
- 1 warranty registration card

Please contact your dealer or Tivoli Audio if any of these items are missing.

Tivoli Audio  
One Broadway, Suite 600  
Cambridge, Massachusetts 02142  
Tel: 877-297-9479  
www.tivoliaudio.com

### Guide to features (front panel):

**1. ALARM:** Once you have set the wake-up time using the Alarm Thumbwheel, push this button in to activate the alarm and the corresponding green LED will light. The LED will remain lit until the Alarm button is turned off. Push the Alarm button out to deactivate the alarm and the LED will extinguish. This Alarm button controls the Model Three Dual Alarm Speaker only and has no effect on the Model Three clock radio's alarm, and vice-versa. See "How to set the alarm" for more information.

**2. ALARM THUMBWHEEL:** Rotate the aluminum thumbwheel counterclockwise until the alarm hand points to the designated time you wish to wake to. Do NOT turn the thumbwheel clockwise or you may damage the mechanism. See "How to set the alarm" for more information.

**3. SNOOZE (top of cabinet):** When the alarm tone sounds, press, hold, and then release the Snooze button to silence the alarm for approximately 5 minutes. After 5 minutes, the alarm tone will automatically resume. This Snooze button controls the Model Three Dual Alarm Speaker only and has no effect on the Model Three clock radio's alarm or radio. Likewise, the Model Three clock radio's Snooze button will not affect the Model Three Dual Alarm Speaker's alarm tone.

**4. CLOCK:** This analog clock features a fine mechanical quartz movement for superb accuracy. The clock operates off of a single "AA" battery so power failures will not affect the clock's accuracy. Check the battery annually so the clock remains accurate. The clock's illumination cannot be turned off or adjusted. It is normal for the light to take several seconds to extinguish if the power supply is disconnected.

### Guide to features (rear panel):

**1. CONNECTING CABLE:** Connect the male RCA from this cable to the Model Three clock radio's rear female RCA output marked "R-SPR" and switch the Model Three's Mono/Stereo switch to stereo. Set the Model Three's rear Balance control to the center detent position for equal balance between the two speakers. Connecting a speaker other than the Tivoli Audio Model Three Dual Alarm speaker will void your warranty and possibly damage your unit.

**2. 12VDC, 10A:** Connect the included AC power supply to this input. Use only the power supply provided with this product. To obtain a replacement, contact your authorized dealer or Tivoli Audio, USA: 1.877.297.9479. The power supply connector is 5.5mm/2.1mm x 13mm long, center positive. Do not connect the power supply to an electrical outlet controlled by a wall switch. It is normal for the power supply to become warm during use. An optional 12VDC nominal, 1.5A fused source may also be used.

**3. TIME SET:** Briefly press and release this button to advance the hands in small increments. Press and hold this button to continuously advance the clock's hands. Release the button when the clock is set properly. Be sure the alarm button is in the OFF position when setting the time. See "How to set the clock".

**4. ALARM GRILLE:** The alarm tone emits from this grille. Do not block this grille

**5. BATTERY BACK UP:** Remove the battery cover and install a 1.5V "AA" battery, observing correct +/- polarity. The clock operates off of the battery continuously and the battery also acts as a back up. In the event of a power failure, the battery back-up will maintain the clock's operation and sound the alarm tone if the alarm button is in the ON position, provided a fresh battery (not included) is correctly installed. The clock face will not illuminate and the radio will not operate during a power failure in order to conserve battery life. Check the battery's strength annually and replace only with a major brand, 1.5V "AA" alkaline battery. If the clock stops operating, replace the battery. To reduce the risk of fire or injury, do not leave a dead battery in the clock. Do not dispose of the spent battery in a fire. Do not open or tamper with the battery. Do not recharge the supplied battery. Dispose of the spent battery according to your state/country's regulations.